

ido[®]




CHOPPER

CH800-BK

COMPONENTS

CHOPPER

1. On/Off button
2. Speed Switch
3. Power Unit
4. Jar Lid
5. Sealing Ring
6. Egg & Cream Whisk
7. 3 Blades for jar
8. Jar 2 L

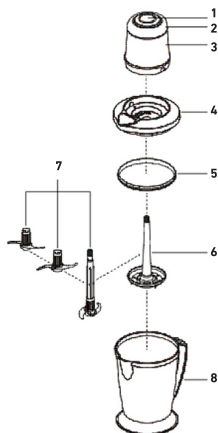

SAFETY INSTRUCTIONS

PLEASE CAREFULLY READ THE INSTRUCTIONS BEFORE USING YOUR APPLIANCE

1. Please keep your instructions manual, the warranty certificate and purchase voucher.
2. Check that electrical installation is in conformity with currently Applicable Standards, compatible with the power and the voltage indicated underneath your appliance. If this is not the case, don't use the appliance.
3. The appliance is made for house hold use only.
4. If there are any defects in the appliance or its cord, cease its use immediately and contact the nearest service centers of **Anasia**.
5. Any intervention other than cleaning, such as normal maintenance must be carried out by an approved **Anasia** service center.
6. Never put the appliance or its cord or the plug into water or any other liquid.
7. Unplug the appliance as soon as you stop using it, before assembly, disassembly and during the cleaning process.
8. For your own safety, only use original spare parts and accessories designed for your appliance.
9. Don't touch any rotating or moving parts while still in motion; always wait for them to stop.
10. Keep the appliance and its cord out of reach of children.
11. The blades are very sharp, take care while handling them, while emptying the bowl or during the cleaning.
12. Do not place metal or solid parts inside the appliance during operation.

BEFORE FIRST USE

- Remove all packaging material before using your appliance for the first time and read the operation instructions.
- Wipe the body with a damp cloth and dry it well.

- The blender and grinding attachment can be washed with warm soapy water, rinse after cleaning and dry thoroughly with a soft dry cloth.

(Larger pieces of food should be cut into approximately 1 to 2 cm pieces).

USING YOUR APPLIANCE

- Place the appliance on a clean, flat surface.
- Fit the blades (6) or (7) into the cup.
- Always fit the blades into the cup before adding ingredients.
- Cut the food into suitably sized pieces and place in the bowl (8).
- To Fit the lid (4) on the cup (8), then fit the power unit (3) on the lid.
- Connect to the power supply, press down the on/off button (1) and hold it until the desired result is achieved.
- Reserve the above procedure to dismantle the unit.
- Always unplug the food chopper before removing the lid.

PRODUCING GUIDE

FOOD	MAXIMUM CAPACITY	PREPARATION	TIME (Approximate)
Meat	300g	Remove bones, fat and gristle. Cut into 2 cm cubes.	Pulse a few times
Herbs	30g	Remove stalks. Herbs are best chopped when clean and dry.	10 secs
Nuts e.g. almonds, walnuts	250g	Ensure shell is removed. Process until chopped. Note: the consistency of fine ground almonds will not be achievable.	10 secs
Cheese eg. cheddar	150g	Cut into 1-2cm cubes.	Pulse a few times
Bread	75g	Remove crusts and cut into 1-2cm cubes.	5 secs
Biscuit	150g	Break into pieces.	5 - 10 secs
Hardboiled eggs	5	Halve or quarter depending upon size.	Pulse a few times
Small onions or shallots	300g	Halve small onions or cut into 2cm pieces.	Pulse a few times
Garlic	200g	Break into cloves and remove skin.	5 secs
Soft fruit e.g. raspberries	300g	Remove stalks.	5 secs

PRODUCING GUIDE

Dried fruit e.g. prunes, apricots	200g	Cut into 2cm pieces.	Pulse a few times
Root ginger	150g	Peel and cut into 1-2cm cubes.	Pulse a few times
Soup	1L	Never blend more than 1L soup. For best results drain.	10 secs Note: Use single blade

CLEANING AND MAINTENANCE

- Handle the blades with caution when cleaning as they can cause injury.
- Don't immerse the Motor Body (3) in water or under running water. Wipe it with a damp cloth, if necessary. Dry carefully.
- To clean the jar (8), pour warm water with a few drops of cleaning soap into the jug, close the lid, and turn it on for a few seconds using the power switch (2).
- Disconnect the cord from Power outlet.
- Remove the blender, rinse it and its lid under running water.
- Wipe the Grinder/Chopper with a damp cloth.

TECHNICAL SPECIFICATION

POWER	VOLT	FREQUENCY
800 W	220-240 V	50-60 HZ

TROUBLE SHOOTING

What to do if your appliance doesn't work?

Check

- The appliance is well connected to the main outlet.
- The blades (6) or (7) are well placed in the jar (8) and the Motor Body (3) is correctly positioned on the jar.
- The power switch (2) is set.

If your appliance is still not working, contact **Anasia** customer service.

MANUFACTURED ACCORDING TO THE EGYPTIAN STANDARD NO. 1590/2010

MADE IN EGYPT FOR ANASIA EGYPT FOR TRADE

التنظيف والصيانة

- افصل الجهاز عن التيار الكهربائي.
- الشفرات حادة جدا. تعامل معها بحذر عند عملية التنظيف لتجنب خطر الإصابة.
- لا تضع جسم الموتور (٣) في الماء ولا تمررها تحت الماء الجاري. يمكن تنظيفها باستخدام قطعة قماش رطبة ثم تجفف تماما.
- لتنظيف الوعاء (٨) قم بصب الماء الدافئ مع بضع قطرات من الصابون السائل داخل الوعاء ، اغلق الغطاء ثم قم بتشغيله لثوان قليلة عن طريق وضع مؤشر التشغيل (٢) على الوضع "١".
- افصل الجهاز عن التيار الكهربائي.
- يمكن تنظيف وعاء المطحنة /الكبة باستخدام قطعة قماش رطبة.

استكشاف الأخطاء وإصلاحها

إذا كان جهازك لا يعمل

- تأكد من أن تم توصيل الجهاز بالتيار الكهربائي
- التأكد من تركيب الاسلحة (٦) او (٧) بشكل صحيح في الوعاء (٨) و تركيب جسم الموتور (٣) بشكل صحيح اعلي الوعاء
- ضبط مؤشر التشغيل (٢) على وضع التشغيل " ١ " .

إذا استمر جهازك لا يعمل ، يرجى الاتصال بخدمة عملاء أنسيا

صنع طبقا للمواصفات القياسية المصرية رقم

2010/1590

صنع في مصر لصالح شركة انسيا مصر للتجارة.

الخصائص الفنية

القدرة	فولت	تردد
٨٠٠ واط	٢٢٠-٢٤٠ فولت	٥٠-٦٠ هرتز

- ثبت الغطاء (٤) على الوعاء (٨) ثم تثبيت جسم الموتور (٣) على الغطاء.
- قم بتوصيل الجهاز بمصدر التيار الكهربائي ثم اضغط علي زر التشغيل (١) مع الاستمرار حتى يتم الحصول على النتيجة المطلوبة.
- افصل الجهاز عن التيار الكهربائي بعد الانتهاء مباشرة ثم قم بفك الجهاز.
- ضع الجهاز فوق سطح نظيف ومستوي .
- ضع الشفرات (٦) أو (٧) في الوعاء قبل إضافة المكونات .
- تقطيع الطعام إلى قطع بحجم مناسب ثم وضعها في الوعاء (٨) القطع الكبيرة يجب تقطيعها إلى قطع من ١ سم إلى ٢ سم تقريبا) .

دليل الانتاج


الطعام	اقصي سعة	التحضير	الوقت (تقريبي)
لحم	٣٠٠ جرام	قم بازاله العظم والدهون و تقطيعها إلى قطع صغيرة	اضغط عدة مرات
اعشاب	٣٠ جرام	قم بإزالة السيقان (تغرم وهى نظيفة وجافة)	١٠ ثوان
المكسرات مثل: اللوز _ عين الجمل	٢٥٠ جرام	تأكد من إزالة القشر (أو تقشيرها)	١٠ ثوان
الجبن مثل الشيدر	١٥٠ جرام	تقطع إلى مكعبات بحجم 1-2 سم	اضغط عدة مرات
الخبز	٧٥ جرام	تقطع إلى مكعبات بحجم 1-2 سم	٥ ثوان
بسكويت	١٥٠ جرام	تقسم إلى قطع	١٠-٥ ثوان
البيض المسلوق	٥	النصف أو الربع حسب الحجم	اضغط عدة مرات
بصل صغير أو الكرات	٣٠٠ جرام	يقطع البصل إلى انصاف أو إلى قطع بحجم 2 سم	اضغط عدة مرات
ثوم	٢٠٠ جرام	قم بتقشيرها ثم تقطيعها	٥ ثوان
الفواكه الطرية مثل التوت	٣٠٠ جرام	إزالة السيقان	٥ ثوان
الفواكه المجففة مثل المشمش	٢٠٠ جرام	تقطع إلى قطع بحجم 2 سم و إزالة البذر	اضغط عدة مرات
الزنجبيل	١٥٠ جرام	يقشر ويقطع إلى قطع بحجم 1-2 سم	اضغط عدة مرات
الشورية	١ لتر	لا تخلط ابدا أكثر من 1 لتر شوربة للحصول على أفضل نتائج	١٥ ثوان ملاحظة: استخدم الشفرة الواحدة

كتيب التعليمات

نشكركم لاختيار منتجات أي دو

أجزاء الجهاز

الخلاط

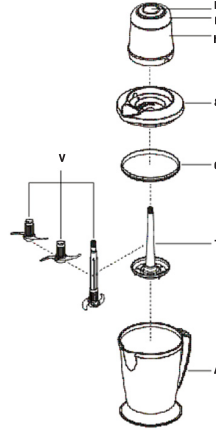

١. مفتاح التشغيل
٢. مفتاح السرعات
٣. جسم الموتور
٤. غطاء الكبة
٥. جوان الغطاء
٦. سلاح خفق الكريمة أو البيض
٧. اسلحة للوعاء
٨. قاعدة سلاح المطحنة
٩. وعاء ٢ لتر

تعليمات السلامة

برجاء قراءة التعليمات بعناية قبل الإستخدام لأول مرة

١. برجاء الاحتفاظ بكتيب التعليمات و شهادة الضمان و قسيمة الشراء
٢. تأكد أن قوة التيار الكهربائي الخاص بالجهاز متطابقة مع قوة التيار الكهربائي للمنزل.
٣. صمم هذا الجهاز للإستخدام المنزلي فقط.
٤. لا تستخدم الجهاز إذا كان به تلف أو لا يعمل بشكل صحيح في مثل هذه الحالة اتصل بمركز خدمة معتمد من قبل أنسيا.
٥. أي تدخل في الجهاز غير التنظيف يجب أن يتم من قبل مركز خدمة معتمد من أنسيا.
٦. لا تغمر الجهاز أو الوصلة الكهربائية في الماء أو أي سوائل أخرى و لا تستخدم الجهاز بأيدي مبلولة.
٧. افصل الجهاز دائما عن التيار بعد الانتهاء من استعماله، قبل الفك والتركيب أو قبل تنظيفه.
٨. لسلامتك الشخصية استخدم فقط قطع الغيار والملحقات الأصلية المناسبة لجهازك.
٩. يجب عدم لمس الشفرات الحادة أثناء التشغيل كما يجب الانتظار حتى يتوقف الجهاز تماما.
١٠. يجب إبقاء الجهاز وكابل الطاقة بعيدا عن متناول الأطفال.
١١. يرجى توخي الحذر عند التعامل مع شفرات القطع الحادة، خاصة عند تنظيف أو تفريغ الوعاء.
١٢. لا تضع أجزاء معدنية أو صلبة داخل الجهاز أثناء التشغيل.

قبل الإستخدام لأول مرة

- قبل استخدام الجهاز لأول مرة ينبغي التأكد من إزالة كافة مواد التغليف وقراءة تعليمات التشغيل.
- امسح جسم الموتور بقطعة قماش مبللة وجففها جيدا.
- يمكن غسل الدورق وملحقات الطحن بالماء الدافئ بالصابون، قم بالشطف بعد التنظيف و قم بالتجفيف جيدا باستخدام قطعة قماش ناعمة جافة.

WAYS TO ACTIVATE YOUR WARRANTY (2 YEARS WARRANTY)

1. Scan the QR code at the bottom on the page.
OR
2. Visit our website www.anasiashop.com
OR
3. Through our mobile application.

MAINTENANCE & CUSTOMER SERVICES

ANASIA, CAIRO

9, Mostafa Refaat St. Sheraton
Heliopolis, Cairo

ANASIA, ALEX

23, Essam Helmy El-Masry St. off Admon
Fremont St. Semouha, Alexandria

ANASIA, MANSOURA, DELTA

2, Ibrahim Shalaby St. off Samia El-Gamal
St. Mansoura

CUSTOMER SERVICE

(02) 22684159

طرق تفعيل الضمان (سنتين ضمان)

١. امسح رمز QR كود في اسفل الصفحة.
أو
٢. قم بزيارة موقعنا الإلكتروني www.anasiashop.com
أو
٣. من خلال تطبيق الموبيل.

مركز الصيانة وخدمة العملاء

شركة أنسيا فرع القاهرة

٩ شارع مصطفى رفعت
مساكن شيراتون، القاهرة

شركة أنسيا فرع الأسكندرية


٢٣ شارع عصام حلمي المصري
متفرع من آدمون فزيمون سموحة، الأسكندرية

شركة أنسيا فرع المنصورة، الدلتا

٢ شارع إبراهيم شلبي
متفرع من سامية الجمل، المنصورة

خدمة العملاء

(٠٢) ٢٢٦٨٤١٥٩

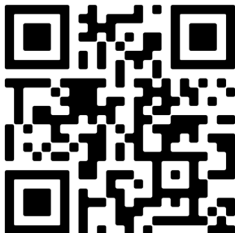

HOTLINE
الخط الساخن



DOWNLOAD ANASIA SHOP APP

